

GENERAL:

The BO-Box Model is designed to allow expandability for control to the Q-Controller. Each BO-Box module has 4x pluggable relays output.

The BO-Box and other IO-Box modules connect and communicate via a RS-485 2-wire connection to the Q-Controller. The Q-Controller supports any combination of the IO Box, the BO-Box can be up to 31 modules, plus 4 onboard relays in Q-Controller, allowing a total of 128 relay output via a single Q-Controller.

All BO-Box configuration information is stored in Q-Controller, so replacement modules do not need to be configured. Each relay can be programmed with/without Normally Energized, Latched, Time delay, and can be triggered by any one or more inputs.

The BO-Box' high density packaging, removable terminal block and DIN rail mounting saves time and panel space. The module snaps easily onto standard top hat (T) profile DIN rail.

- 4 pluggable Relays SPDT, Dry contacts
- Resistive load:
 - 10A at 250VAC
 - 10A at 30VDC
- Inductive load:
 - 7.5A at 250VAC
 - 5A at 30VDC

REVISIONS				
ECN	REV.	DESCRIPTION	DATE	APPROVED
1061	A	FIRST RELEASE	2015-05-06	XY


Specification:	
Fuse	F1: Polyswitch 750mA Polyswitch device resets after the fault is cleared and power to the circuit is removed
Power Supply	Voltage: 24VDC nominal, range 18 to 30VDC 24VAC nominal, range 15 to 24VAC 50/60HZ Note: Input Power is half-wave rectifier circuit, it can be either floating or grounded. You will damage devices if you mix half wave and full wave rectifiers on the same AC source. Use extreme caution when sharing a common AC source. Sharing a common DC source is less problematic. The BO-Box can share the same AC or DC power supply with Q-Controller, as Q-Controller is half-wave rectifier inside. Current: max. 0.75 A (fuse protected) Actual running current < 0.3A
Address	Address can be defined from 0 to 30 with the four dipswitch A0, A1, A2, A3 and A4 Factory Default address is 0 with A0= OFF, A1= OFF, A2= OFF, A3= OFF, A4= OPEN Address table in page3
Panel Indicators	TX/RX status RS-485 port TX/RX Status for Q-Controller Network Relay1 to Relay4 Status

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF QUATROSENSE ENVIRONMENTAL LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF QUATROSENSE ENVIRONMENTAL LTD IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	QUATROSENSE ENVIRONMENTAL LTD.
DIMENSIONS ARE IN INCHES		XY	15-05-06	
TOLERANCES:		TITLE:		
FRACTIONAL: ±		BO-BOX		
ANGULAR: MACH ± BEND ±		Installation Drawing		
TWO PLACE DECIMAL ±		SIZE		
THREE PLACE DECIMAL ±		DWG. NO.		
INTERPRET GEOMETRIC TOLERANCING PER:		REV		
MATERIAL		A		
FINISH		86550-005-000		
NEXT ASSY	USED ON	SCALE: 1:2		
APPLICATION		WEIGHT:		
DO NOT SCALE DRAWING		SHEET 1 OF 3		

Recommend Connection for New Installations

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
-	-	See Sheet1	-	-

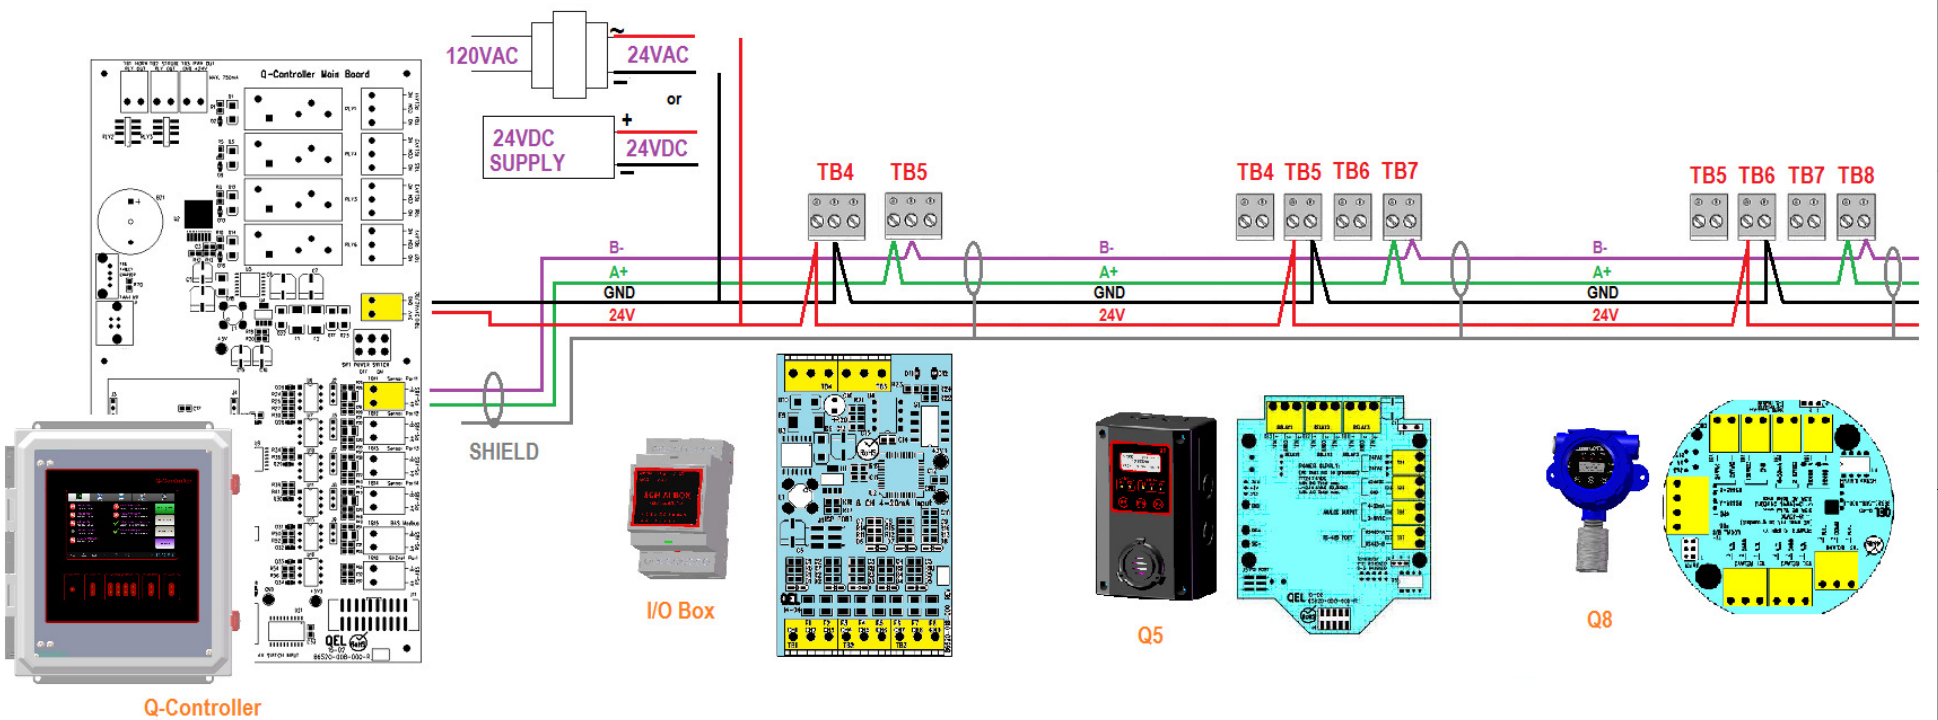

- Note:
1. The power supply can be 24VAC or DC as every device uses a half-wave rectifier in the drawing
 2. The power negative may be grounded or floating
 3. Don't mix full wave rectifiers device with this system
 4. RS-485 cable should be wired from one sensor to another without tees or stub. Power cable does not matter
 5. Before power up, the polarity of the 24VAC power supply should be checked carefully, reversing polarity on the network will cause the RS-485 driver chips blow up
 6. The I/O Box in the drawing can be AI-Box, AO-Box, BI-Box or BO-Box

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF QUATROSENSE ENVIRONMENTAL LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF QUATROSENSE ENVIRONMENTAL LTD IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:		NAME	DATE	QUATROSENSE ENVIRONMENTAL LTD
		DIMENSIONS ARE IN INCHES				TITLE: BO-Box Installation Drawing
		TOLERANCES:				
		FRACTIONAL: ±				
		ANGULAR: MACH ± BEND ±				
		TWO PLACE DECIMAL ±				SIZE DWG. NO.
		THREE PLACE DECIMAL ±				B 86550-005-000
		INTERPRET GEOMETRIC TOLERANCING PER:				REV
		MATERIAL				A
		FINISH				SCALE: 1:4
NEXT ASSY	USED ON					SHEET 2 OF 3
	APPLICATION	DO NOT SCALE DRAWING				

Address Table:

Module Address	Dip Switch Setting				
	A0	A1	A2	A3	J2
0	OFF	OFF	OFF	OFF	Open
1	ON	OFF	OFF	OFF	Open
2	OFF	ON	OFF	OFF	Open
3	ON	ON	OFF	OFF	Open
4	OFF	OFF	ON	OFF	Open
5	ON	OFF	ON	OFF	Open
6	OFF	ON	ON	OFF	Open
7	ON	ON	ON	OFF	Open
8	OFF	OFF	OFF	ON	Open
9	ON	OFF	OFF	ON	Open
10	OFF	ON	OFF	ON	Open
11	ON	ON	OFF	ON	Open
12	OFF	OFF	ON	ON	Open
13	ON	OFF	ON	ON	Open
14	OFF	ON	ON	ON	Open
15	ON	ON	ON	ON	Open

16	OFF	OFF	OFF	OFF	Closed
17	ON	OFF	OFF	OFF	Closed
18	OFF	ON	OFF	OFF	Closed
19	ON	ON	OFF	OFF	Closed
20	OFF	OFF	ON	OFF	Closed
21	ON	OFF	ON	OFF	Closed
22	OFF	ON	ON	OFF	Closed
23	ON	ON	ON	OFF	Closed
24	OFF	OFF	OFF	ON	Closed
25	ON	OFF	OFF	ON	Closed
26	OFF	ON	OFF	ON	Closed
27	ON	ON	OFF	ON	Closed
28	OFF	OFF	ON	ON	Closed
29	ON	OFF	ON	ON	Closed
30	OFF	ON	ON	ON	Closed

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
-	-	See Sheet1	-	-

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:	NAME	DATE	QUATROSENSE ENVIRONMENTAL LTD	
		DIMENSIONS ARE IN INCHES	DRAWN			TITLE: BO-BOX Installation Drawing
		TOLERANCES:	CHECKED			
		FRACTIONAL: ±	ENG APPR.			
		ANGULAR: MACH ± BEND ±	MFG APPR.			
		TWO PLACE DECIMAL ±	Q.A.		SIZE DWG. NO. REV B 86550-005-000 A	
		THREE PLACE DECIMAL ±	COMMENTS:			
		INTERPRET GEOMETRIC TOLERANCING PER:				
		MATERIAL			SCALE: 1:4 WEIGHT: SHEET 3 OF 3	
		FINISH				
NEXT ASSY	USED ON					
APPLICATION		DO NOT SCALE DRAWING				